



## YTSX.E37779 Valves, Electric for Use in Hazardous Locations

[Page Bottom](#)

### Valves, Electric for Use in Hazardous Locations

[See General Information for Valves, Electric for Use in Hazardous Locations](#)

#### **PETER PAUL ELECTRONICS CO INC**

E37779

480 John Downey Dr  
PO BOX 1180  
New Britain, CT 06051-2910 USA

#### **Safety valves, Class I, Groups A, B, C and D; Class II, Div. 1, Groups E, F and G.**

Models ELW52G, ELW52H, ELW52J, ELW52V, ELW52K, ELW52N, ELW52O, EW52G, EW52H, EW52J, EW52V, EW52K, EW52N, EW52O, with suffix 8, followed by D, or one or two of A, F, O, R or T, followed by C or CC, followed by P, with or without A, D or S. Model number may be preceded by a V or VO.

Model ELW52, EW52, followed by Z, with a four digit number suffix, followed by A, B, C, D, E, F, G, H, J, K, L, M, N, O, P, R, S, T, U, V, W, X, Y or Z, followed by SC or SCC, followed by P. Model number may be preceded by V or VO.

#### **Safety valves, Class I, Groups C and D; Class I, Div. 2, Groups A, B, C and D; Class II, Groups E, F and G.**

Model E22 followed by Z, with a four digit number suffix, followed by a fluid designation letter, followed by C, CC, E, EC, SC or SCC, followed by B, F, H, M or P.

Model E22, followed by letter Z, may be followed by a four digit number, followed by B or M, followed by B and/or C, CC, E or EC; followed by F, H, M, P or B, with or without additional A or S. May be additionally prefixed with the Letter V.

Models E22G, -H, -J, -K with suffix 2, 3, 4, 6, 7 or 9, followed by D, L, M, O, P or R, followed by BC, BCC, C, CC, E or EC, followed by B, F, H, M or P, (optional A or S), (optional G or L).

Models E22G, -H, -J, -K, -N, -O, -P, -R with suffix 2, 3, 4, 6, 7 or 9, followed by D or one or two of letters F, L, M, O, R or T, followed by letter B and/or CC, or C or E or EC, followed by B, F, H, M or P, (optional A or S).

Models E52G, -H, -J, -K, -N with suffix 8, followed by D or one or two of A, F, O, R or T, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A, D or S). Model number may be preceded by V or VO.

Model E52 followed by Z, with a four digit number, followed by A through H, J through P, R through X, Y or Z, followed by SC, SCC, SE or SEC, followed by B, F, H, M or P).

Models EL52G, -H, -J with suffix 8, followed by D or one or two of O, R or T, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A or S).

Model EL52Z with a five digit number suffix, followed by SC, SCC, SE or SEC, followed by B, F, H, M or P.

Models EH22G, -H, -J, -K with suffix 2, 3, 4, 6, 7 or 9, followed by D, L, M, O, P or R, followed by BC, BBC, C, CC, E or EC, followed by B, F, M, P, (optional A or S), (optional G or L).

Models ELL52G with suffix 2, 5 or 8, followed by D or one or two of F, O, R or T, followed by C or CC, followed by B, F, H, M or P.

#### **General purpose valves, Class I, Div. 1, Groups A, B, C and D; Class II, Div. 1, Groups E, F and G.**

Model ELW51G, ELW51H, ELW51J, ELW51V and ELW51K, EW51G, EW51H, EW51J, EW51V, EW51K, with suffix 2, 5 or 8 with or without A, F, O or T, followed by X, followed by C or CC, followed by P, with or without A, D or S, followed by a G or L. Model number may be preceded by a V or VO.

Models ELW52G, ELW52H, ELW52J, ELW52V, ELW52K, ELW52N, ELW52O, EW52G, EW52H, EW52J, EW52V, EW52K, EW52N and EW52O with suffix 2, 5 or 8, followed by D, or one or two of A, F, O, R or T, followed by C or CC, followed by P, with or without A, D or S. Model number may be preceded by a V or VO.

Models ELW53GG, ELW53GH, ELW53GJ, ELW53GV, ELW53GK, ELW53HH, ELW53HJ, ELW53HV, ELW53HK, ELW53JJ, ELW53JV, ELW53JK, ELW53VV, ELW53VK, ELW53KK, EW53GG, EW53HH, EW53HJ, EW53JJ, EW53KJ, EW53KK, with suffix 2, 5 or 8, followed by D, or one or two of A, F, O, R, T, V or X, followed by C or CC, followed by P, with or without A, D or S, followed by a G or L. Model number may be preceded by a V or VO.

Models ELW51, ELW52, ELW53, EW51, EW52, EW53, EW54, EW55, EW56, followed by Z, with a four digit number suffix, followed by A, B, C, D, E, F, G, H, J, K, L, M, N, O, P, R, S, T, U, V, W, X, Y or Z, followed by CP or CCP, with or without a P or L. Model number may be preceded by a V or VO.

Models EW54GG, EW54HH, EW54JJ, EW54VV, EW54KK, with suffix 2, 5 or 8, followed by D, or one or two of A, F, O, R, T, V or X, followed by C or CC, followed by P, with or without A, D or S. Model number may be preceded by a V or VO.

Models EW55GG, EW55HH, EW55JJ, EW55VV, EW55KK, with suffix 2, 5 or 8, followed by D, or one or two of A, F, O, R, T, V or X, followed by C or CC, followed by P, with or without A, D or S. Model number may be preceded by a V or VO.

Models EW56GG, EW56HH, EW56JJ, EW56VV, EW56KK, with suffix 2, 5 or 8, followed by D, or one or two of A, F, O, R, T, V or X, followed by C or CC, followed by P, with or without A, D or S. Model number may be preceded by a V or VO.

**General purpose valves, Class I, Groups C and D; Class I, Div. 2, Groups A, B, C and D; Class II, Groups E, F and G.**

Models E21G, -H, -J, -K, E23GG, -HJ, -JJ, -JK, -KK, -NK, -PK, -RK, E24GG, -HJ, -JJ, -JK, -JN, -KN, E25GG, -HH, -JH, -JJ, -KK, -NK, E26GG, -HH, -JJ, -KK, -NK with suffix 2, 3, 4, 6, 7 or 9, followed by D or one or two of letters F, L, M, O, P, R, T, U, W, X, Y or Z, followed by letters B and/or CC or C or E or EC, followed by B, F, H, M or P, (optional A or S).

Models E22G, -H, -J, -K, -N, -O, -P, -R with suffix 2, 3, 4, 6, 7 or 9, followed by D or one or two letters F, L, M, O, R, T, W or Y, followed by B and/or CC or C or E or EC, followed by B, F, H, M or P, (optional A or S).

Models E21, E22, E23, E24, E25, E26 followed by Z, with a 4 digit number suffix, followed by a fluid designation letter, followed by B, C, CC, E or EC, followed by B, F, H, M or P, followed by A or S.

Model E22, followed by Z, may be followed by a four digit number, followed by B or M, followed by B and/or C, CC, E or EC; followed by F, H, M, P or B, with or without additional A or S. May be additionally prefixed with the Letter V.

Models EH21G, -H, -J, -K with suffix 7, followed by D, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A or S), (optional G or L).

Models EH23GG, -HH, -JJ, -KK with suffix 9 or 19, followed by D, O, P or R, followed by BC, BCC, C, CC, E or EC, followed by B, F, H, M or P, (optional A or S), (optional G or L).

Models EH21, EH22, EH23 followed by Z, followed by 4 digit number, followed by A through H, J through P, R through X, Y or Z, followed by C, CC, E or EC, followed by B, F, H, M or P.

Models E51G, -H, -J with suffix 2, 5 or 8, with or without A, F, O or T, followed by X, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A, D or S).

Models E52G, -H, -J, -K, -N with suffix 2, 5 or 8, followed by D or one or two of A, F, O, R or T, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A, D or S). Model number may be preceded by V or VO.

Models E53GG, -HH, -JJ, -KJ, -KK, -NJ, -NK, with suffix 2, 5 or 8, followed by D or one or two of A, F, O, R, T, V or X, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A, D or S).

Models E52GG, E52HH, E53HJ, E53JJ, E53KJ, E53KK, E53NJE53NK with suffix 2, 5 or 8, followed by D or one or two of A, F, O, R, T, V or X, followed by C, CC, E or EC, followed by B, F, H, M or P, with or without A, D or S. Model number may be preceded by V or VO.

Models E54GG, -HH, -JJ, -JK, -JN, -KK, -KN, E55GG, -HH, -JJ, -KJ, -KK, -NJ, -NK, E56GG, -HH, -JJ, -KK with suffix 2, 5 or 8, with or without A, F, O, R, T or VXX, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A, D or S). Model number may be preceded by V or VO.

Models E51, E52, E53, E54, E56 followed by Z, followed by a four digit number, followed by A through H, J through P, R through X, Y or Z, followed by CB, CM, CP, CCB, CCM, CCP, CH, CHH, EB, EM, EP, EH, ECB, ECM, ECH or ECP. Model number may be preceded by V or VO.

Models EL51G, -H, -J with suffix 2, 5 or 8, followed by O or T, followed by X, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A or S). Model number may be preceded by V or VO.

Models EL52G, -H, -J with suffix 2 or 5, followed by D or one or two of O, R or T, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A or S).

Models EL53GG, -GH, -HH, -JJ with suffix 2, 5 or 8, followed by D or one or two of O, R, T, V or X, followed by C, CC, E or EC, followed by B, F, H, M or P, (optional A or S).

Models EL51Z, -52Z, -53Z with a five digit number suffix, followed by CB, CCB, CCH, CCM, CCP, CM, CP, EB, EH, EM, EP, ECB, ECH, ECM or ECP.

Model ELL52 followed by Z with a four digit number suffix, followed by C, J, L, N, P or T, followed by C, CC, E or EC, followed by B, F, H, M or P. Model number may be preceded by V or VO.

Model ELL53GG with suffix 2, 5 or 8, followed by D or one or two of F, O, R, T, V or X, followed by C, CC, E or EC, followed by B, F, H, M or P.

Model ELL53 followed by Z, with a four digit number suffix, followed by C, J, L, N, P or T, followed by C, CC, E or EC, followed by B, F, H, M or P. Model number may be preceded by V or VO.

**Class I, Division 2, Groups A, B, C and D; Class II, Groups E, F and G.**

**Safety valves:**

Models N72K, N72N, N72O, N72P and N72R; followed by 3, 6 or 9 or 10; followed by Letter D or one or two of Letters F, L, M, O or R; followed by Letters BC, BCC, C, CC or N; followed by Letter F or P, with or without additional Letter A or S.

Model N72Z; with a four digit number suffix; followed by A, C, D, E, F, G, H, J, K, L, N, O, P, R, S, T, U, V, W, X, Y or Z; followed by Letter C, CC, or S; followed by Letter F or P.

**General purpose valves:**

Model N71; followed by J, K, N, O or P; suffixed No. 3, 6 or 9 or 10; followed by Letter D or one or two of Letters F, G, G1, O, Y or Z; followed by Letters BC, BCC, C, CC; followed by Letter F or P with or without additional Letter A or S.

Models N72K, N72N, N72O, N72P, N72R and N72T, suffixed No. 3, 6 or 9 or 10; followed by Letter D or with one or two of Letters F, L, M, O or R; followed by Letters BC, BCC, C, or CC; followed by Letter F or P, with or without additional Letter A or S.

Model N73; followed by JJ, KK, NN, OO, PP or PR; followed by 3, 6 or 9; followed by Letter D or one or two of Letters F, G, G1, L, M, O, R, V, Y or Z; followed by Letters BC, BCC, C or CC; followed by Letter F or P, with or without additional Letter A or S.

Models N74, N75 or N76; followed by JJ, KK, NN, OO, PP, PR; followed by 3, 6 or 9, followed by Letter D or one or two Letters F, G, G1, L, M, O, R, V, Y or Z; followed by Letters B, BCC, C or CC; followed by Letter F or P, with or without additional Letter A or S.

Models N71, N72, N73, N74, N75 or N76; followed by Letter Z with a four digit number suffix; followed by A, C, D, E, F, G, H, J, K, L, N, O, P, R, S, T, U, V, W, X, Y or Z; followed by Letters C, CC, F or P.

Last Updated on 2013-12-03

---

[Questions?](#)

[Print this page](#)

[Terms of Use](#)

[Page Top](#)

© 2016 UL LLC

The appearance of a company's name or product in this database does not in itself assure that products so identified have been manufactured under UL's Follow-Up Service. Only those products bearing the UL Mark should be considered to be Certified and covered under UL's Follow-Up Service. Always look for the Mark on the product.

UL permits the reproduction of the material contained in the Online Certification Directory subject to the following conditions: 1. The Guide Information, Assemblies, Constructions, Designs, Systems, and/or Certifications (files) must be presented in their entirety and in a non-misleading manner, without any manipulation of the data (or drawings). 2. The statement "Reprinted from the Online Certifications Directory with permission from UL" must appear adjacent to the extracted material. In addition, the reprinted material must include a copyright notice in the following format: "© 2016 UL LLC".